


## Director's Chair Setup Instructions



### Step #1

Slide wood dowels in the hem of the chair seat. Partially open the chair as shown. Slide seat cover into side grooves until flush with front of chair.

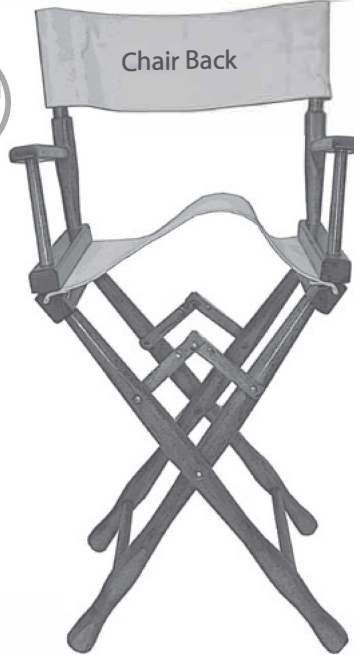

### Step #2

Raise arms to upright position. Slide the chair Back down over the chair posts as shown.



### Step #3

Open the chair until the seat begins to tighten. Using your shoe apply slight downward pressure to the front cross brace until it locks. Repeat for the back cross brace.